


# Single Port FXS Module for IP PBX and card

**AX-110S**

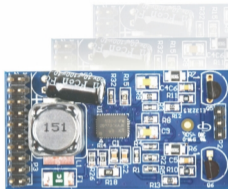

## FXS

FXS is an interface that connects to a station, such as an analog telephone or the FXO interface of another PBX. It provides ringing voltage and battery to the FXO devices. FXS interfaces are used on the inside of your PBX, they do not connect directly to the PSTN. One FXS channel is required for each telephone that you wish to connect to your Asterisk system

## AX-110S

AX-110S is an analog station module. It provides one channel FXS interface which allows the IP PBX and AX series card to terminate one analog telephone